



**FIBER TOOLS**

# OPTI-CLEAN REEL CLEANER

TESTING | TROUBLESHOOTING | ACCURACY


## Product Features:

The Opti-Clean reel cleaner is an essential tool to clean fiber optic connectors. It is the best dry method for cleaning fiber optic termini such as SC, LC, FC, ST, E2000 and other common connectors.


### Features include:

- Lint free cleaning tape
- Antistatic design
- Effective and efficient ferrule end face cleaning
- Easy to replace fiber spools available


## PERFORMANCE:

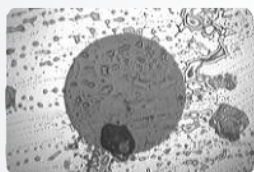

Before (1)

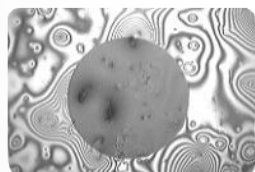

Before (2)

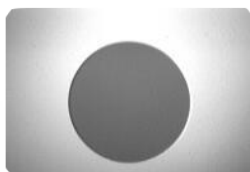

After



## ORDERING INFORMATION:

| CAT. NO.    | DESCRIPTION                               |
|-------------|---|
| REEL-CLN    | Opti-Clean Reel Cleaner                   |
| REEL-CLN-SP | Opti-Clean Reel Cleaner Replacement Spool |
| 1.25 SWAB   | 1.25mm Cleaning Swab (100 pack)           |
| 2.5 SWAB    | 2.5mm Cleaning Swab (100 pack)            |

## SPECIFICATIONS:

|                | OPTI-CLEAN REEL CLEANER | REPLACEMENT SPOOL |
|----------------|-------------------------|-------------------|
| Cleaning Count | > 600 times             | > 600 times       |
| Size           | 130 x 88 x 32mm         | 104 x 60 x 30mm   |
| Weight         | 0.14kg                  | 0.08kg            |

1390 Aspen Way Vista, CA • 92081

TC-OC-RC 01/20

Latin America Phone : 1.760.510.0558 | EMEA Phone: +44 (0) 1633 927050

©2019 Tempo Communications Inc. • An ISO 9001 Company

EMEA Address: Tempo Communications Limited • Brecon House,  
William Brown Close, Cwmbran • NP44 3AB, UK

[TempoCom.com](http://TempoCom.com) | tel 800.642.2155



**TEMPO**  
COMMUNICATIONS

*Renewed Vision. Innovation Forward.*



Follow us on Social Media  
[@TempoComms](https://twitter.com/TempoComms)

## OPERATION



Depress lever



Wipe connector ferrule across cleaning surface

## TAPE REPLACEMENT



1. Unscrew side cover screw



2. Remove side cover



3. Remove old cartridge



4. Insert new cartridge



5. Replace side cover



6. Fasten side screw

## CLEANING SWABS

- The precision cleaning swabs are used to clean bulkhead ferrules and inside mating sleeves.
- Available in 2.5mm and 1.25mm versions.
- Single use.
- Sold in 100 packs.



1390 Aspen Way Vista, CA • 92081

TC-OC-RC 01/20

Latin America Phone : 1.760.510.0558 | EMEA Phone: +44 (0) 1633 927050

©2019 Tempo Communications Inc. • An ISO 9001 Company

EMEA Address: Tempo Communications Limited • Brecon House,  
William Brown Close, Cwmbran • NP44 3AB, UK

[TempoCom.com](http://TempoCom.com) | tel 800.642.2155



**TEMPO**  
COMMUNICATIONS

*Renewed Vision. Innovation Forward.*



Follow us on Social Media  
[@TempoComms](https://twitter.com/TempoComms)